Ref. No. 3649
042000

ONKYO® SERVICE MANUAL

COMPACT DISC CHANGER
MODEL DX-C380

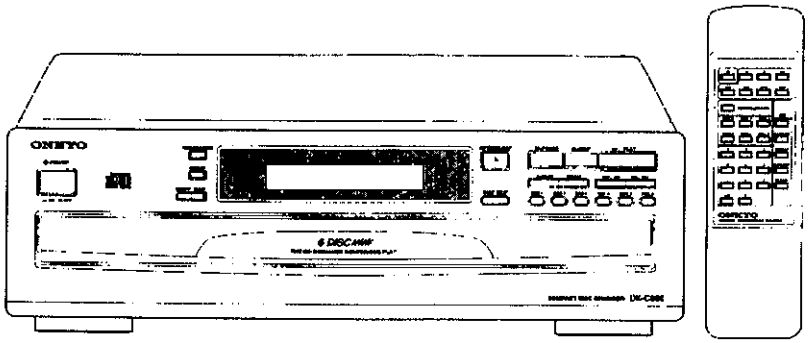

Black and Silver models

BMD	120V AC, 60Hz
BMPP/BMPA/SMPP	230V AC, 50Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

ONKYO®
AUDIO COMPONENTS

TABLE OF CONTENTS

Table of contents 1
Service procedure/ Caution on replacement of optical pick up / Specifications 2
Laser warning lanel 3
IC block diagram and descriptions 4
Microprocessor connection diagram 8
Microprocessor terminal description 9
Care should be taken with the optical pickup 10
Trouble shooting 11
Initializing operation 13
Error message displayed in heat-running mode.14
Block diagram 15
Chassis exploded view 17
Parts list.....19
Pick-up drive unit view.....20
Printed circuit parts list 21
Printed circuit board view from bottom side.....23
Schematic diagram 27
Adjustment procedurers.....29
Packing view 30

SPECIFICATIONS

Signal readout system:	Optical non-contact
Reading rotation:	About 500 - 200 r.p.m. (constant linear velocity)
Linear velocity:	1.2 - 1.4 m/s
Error correction system:	Cross Interleave Reed-Rolomon code
D/A converter:	1 bit PWM/ACCUPULSE
Sampling frequency:	352.8 kHz (8 times oversampling)
Number of channel:	2 (stereo)
Frequency response:	5 Hz - 20kHz
Total harmonic distortion:	0.005% (at 1kHz)
Dynamic range:	96 dB
Signal to noise ratio:	92 dB
Channel separation:	92 dB (at 1kHz)
Wow and Flutter:	Below threshold of measurability
Output level:	2 volts r.m.s.
Power consumption:	10 watts
Power supply :	120V, 60Hz 230V, 50Hz
Dimensions (W x H x D):	435 x 131 x 433 mm (17-1/8" x 5-3/16" x 17-1/16"
Weight:	6.9 kg (15.2 lbs.)

Specifications and features are subject to change wuthout notice.

SERVICE PROCEDURES

1. Safety-check out

After correcting the original service problem,perform the following safety check before releasing the set to the customer:

Connect the insulating-resistance tester between the plug of power supply cord and chassis.

Specifications:More than 10Mohm at 500V.

Initialize the set.

Roulette stops when the POWER button is pushed while pushing the button of DISC6 with DISC1 gripped.

Note:

CD mechanism might be damaged to the movement (transportation) without gripping DISC.

CAUTION ON REPLACEMENT OF OPTICAL PICK UP

The laser diode in the optical pickup block is so sensitive to static electricity,surge current and etc, that the components are liable to be broken down or its reliability remarkably deteriorated.

During repair,carefulley take the following precautions. (The following precautions are included in the service parts.)

PRECAUTIONS

1.Ground for the work-desk.
Place a conductive sheet such as a sheet of copper (with inpedance lower than 10MΩ) on the work-desk and place the set on the conductive sheet so that the chassis.

2.Grounding for the test equipment and tools.
Test equipments and toolings should be grounded in order that their ground level is the same the ground of the power source.

3.Grounding for the human body.
Be sure to put on a wrist-strap for grounding whose other end is grounded.
Be particularly careful when the workers wear synthetic fiber clothes, or air is dry.

4.Select a soldering iron that permits no leakage and have the tip of the iron well-grounded.

5.Do not check the laser diode terminals with the probe of a circuit tester or oscilloscope.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICE

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!
WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. INCASE IT IS NECESSARY TO CONFIRM LASER BEAM EMMISION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

Laser Diode Properties

Material: GaAS/GaALAs
Wavelength: 760 ~ 800mm
Emission Duration: continuous
Laser output: max. 0.5mW*

*This output is the value measured at a distance about 1.8mm from the objective lens surface on the Optical Pick-up Block.

LASER WARNING LABEL

These labels are located on the mechanism.

1. Warning label

This label is located on the chassis.

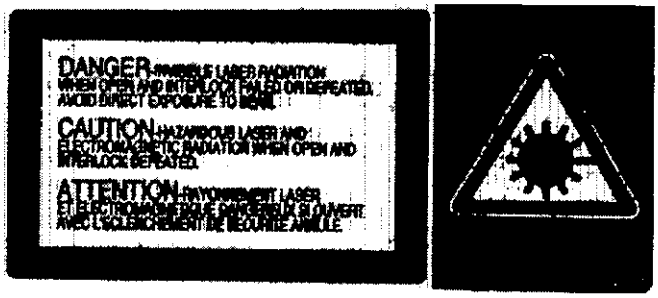

2. Class 1 label

This label is located on the rear panel.

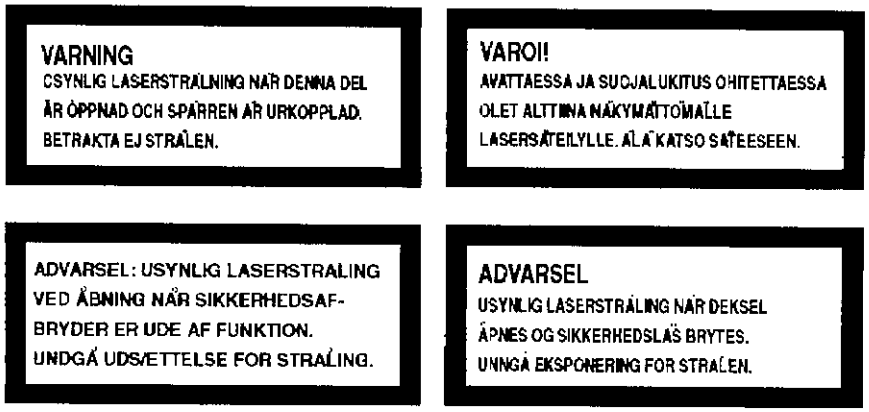
VARNING
OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.
VARO!
AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDER ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
ADVARSEL
USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.

Only 230V model

CAUTION ON REPLACEMENT OF OPTICAL PICKUP

The laser diode in the optical pickup block is so sensitive to static electricity, surge current and etc. that the components are liable to be broken down or its reliability remarkbly deteriorated.
During repair, carefully take the following precautions.

1. When replacing the optical pickup, first short the LD terminals and remove the connector. Also, when attaching the new opitical pickup, after attaching the connector, unsolder the LD terminals.
2. Do not touch the optical pickup object lens with the hands.

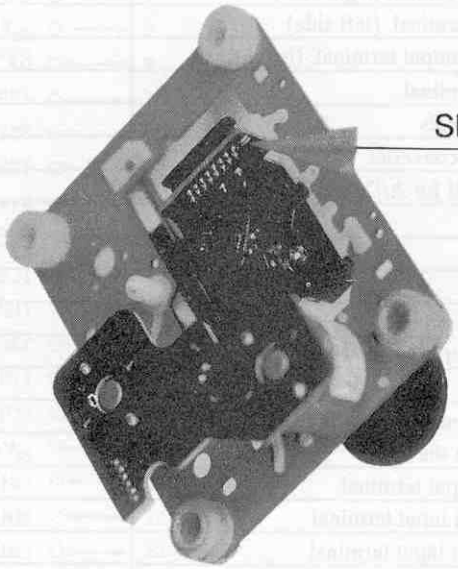

TROUBLE SHOOTING

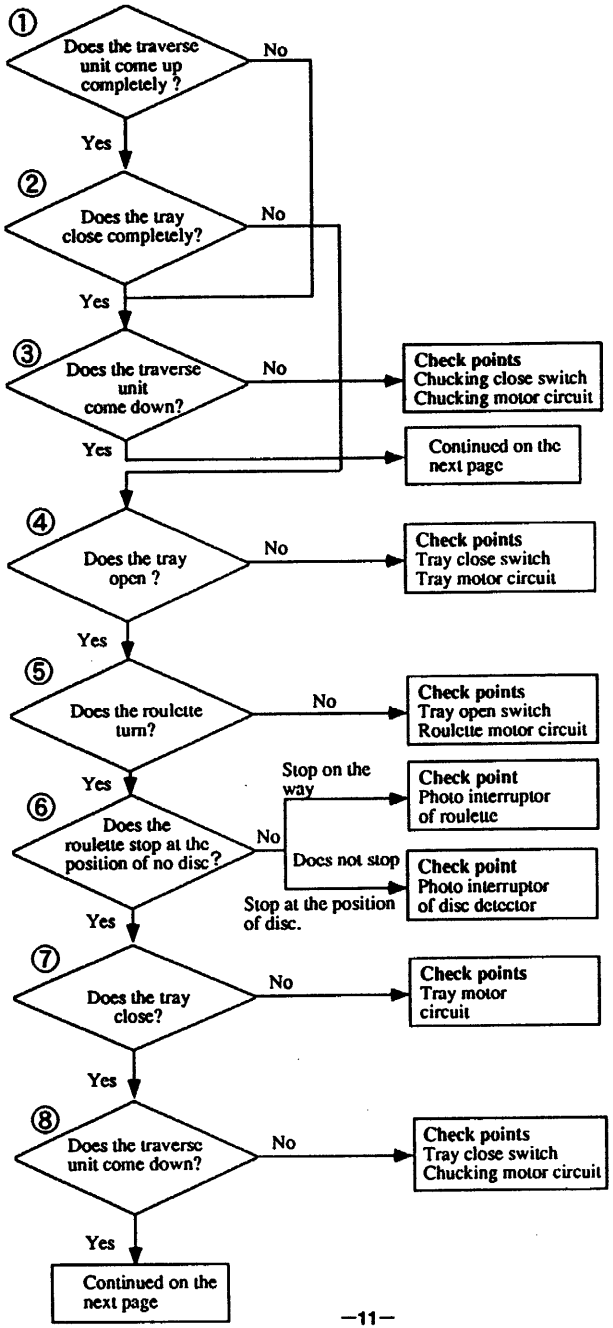

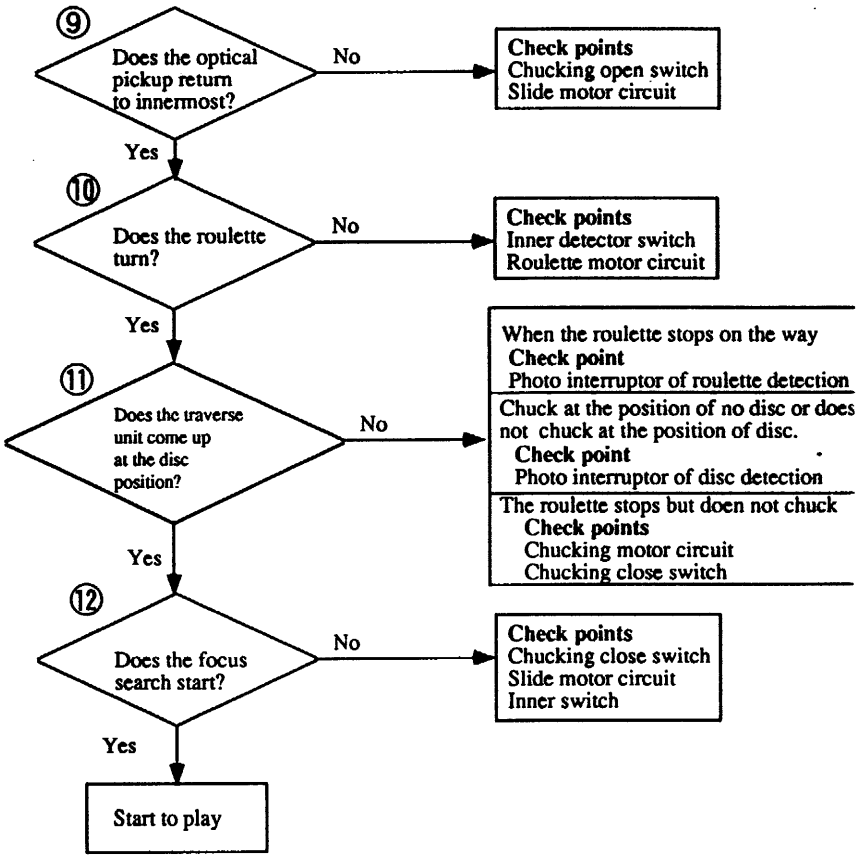

INITIALIZING OPERATION

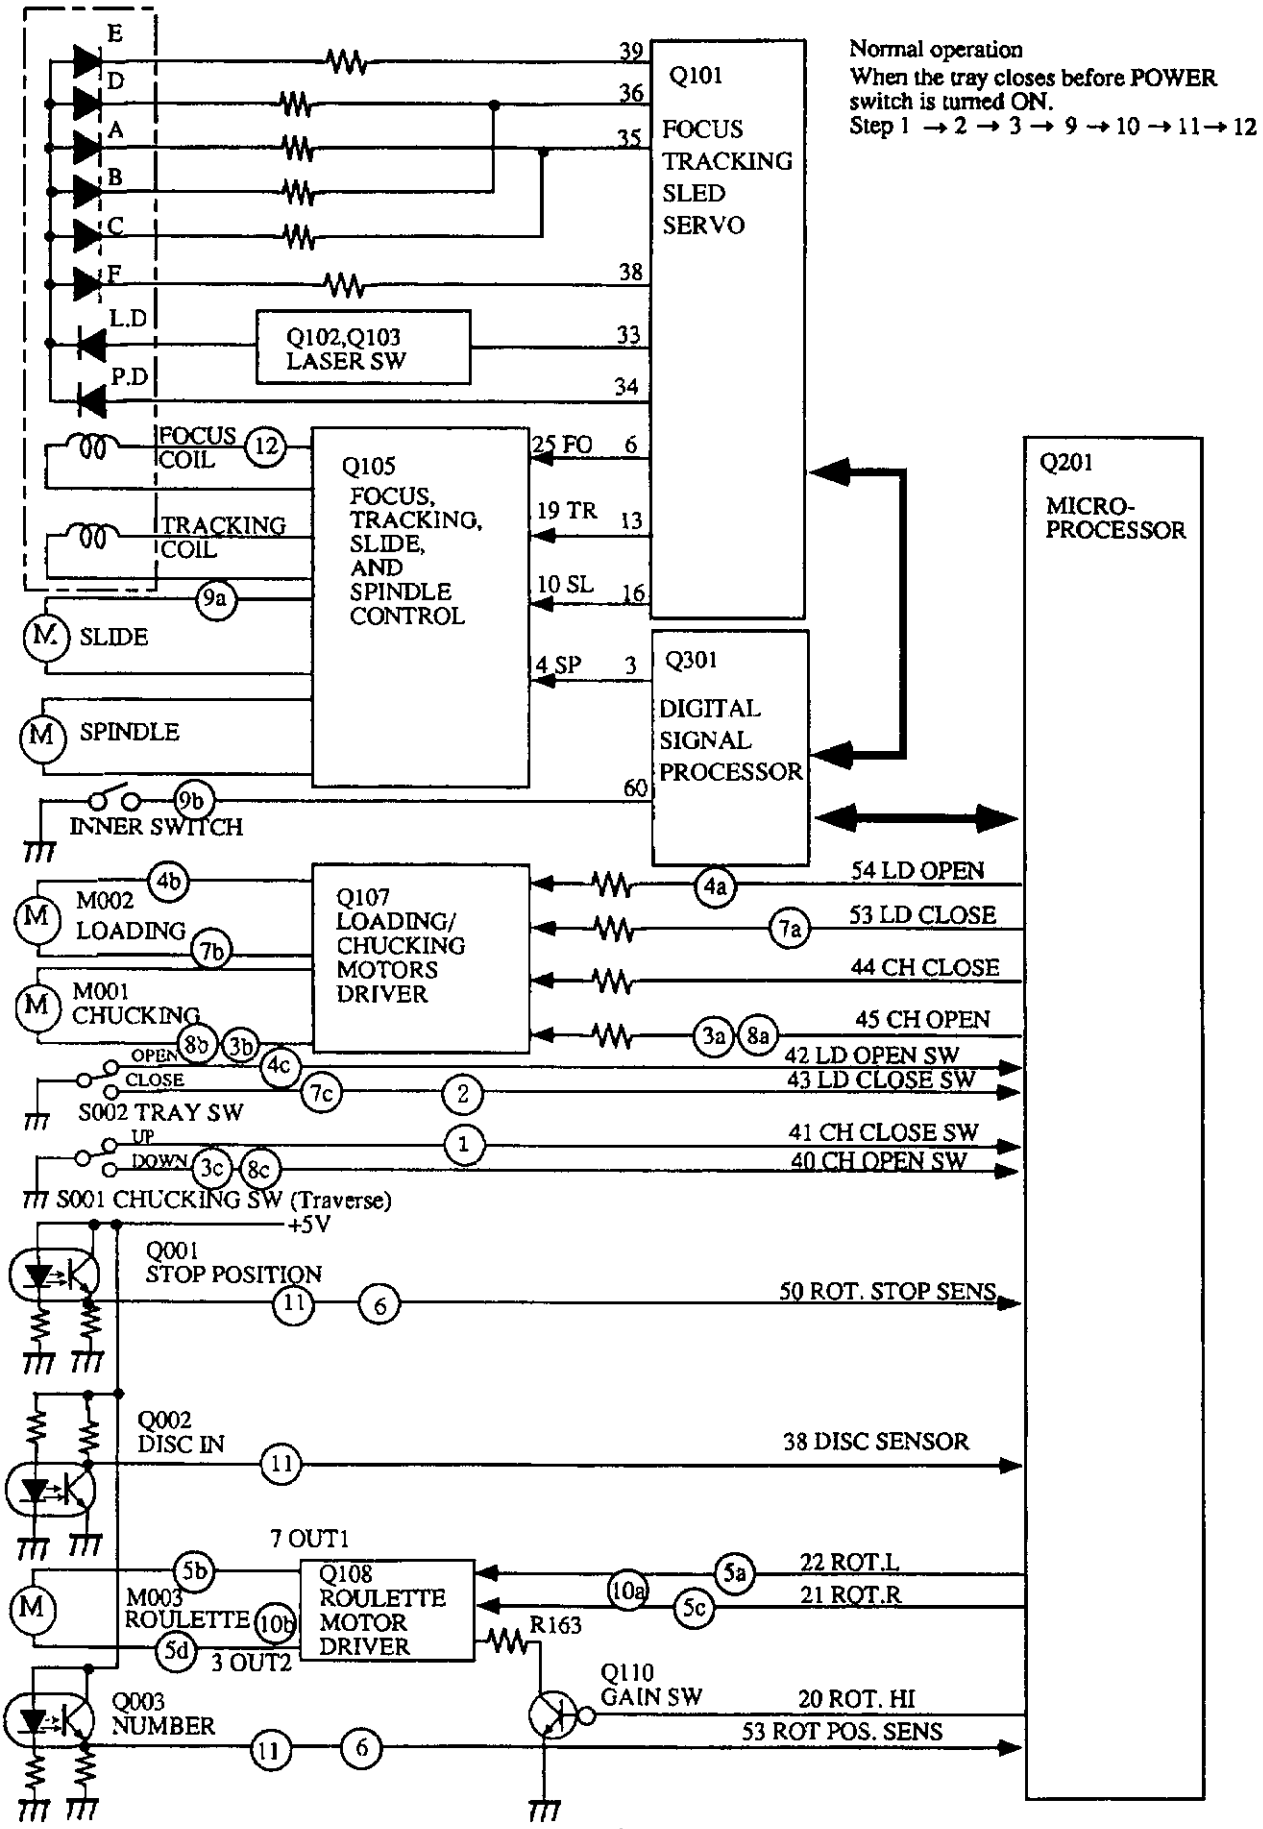

ERROR MESSAGE DISPLAYED IN HEAT-RUNNING MODE

Heat-running Mode : Power ON as pushing DOWN button together.

Operation :
1. DISC 1 chucking and TOC Reading (Pick-up Home position is displayed.)
2. Accessing of the Outermost Track
3. Tray Open
4. Tray Close
5. DISC 1 Playing / Stop and Chucking Down
6. Roulette Turning 7/6 Turns clockwise

Then,
1. DISC 2 chucking and TOC Reading (Pick-up Home position is displayed.)
2. Accessing of the Outermost Track
3. Tray Open
4. Tray Close
5. DISC 2 Playing / Stop and Chucking Down
6. Roulette Turning 5/6 Turns counter-clockwise

Then,
Continued as the above.

In these operation Error Message is shown in the display if any error occurs in the mechanism or the servo control. And then you can find the failure point almost exactly in this mode before you repair rejected units.

1. nf : FOCUS NG : FOCUS SERVO ON missed (Failure in Laser or RF circuit)
2. ng : GFS NG : TIMEOUT for Non-GFS (Synchronous Signal Detection) (Failure in RF Demodulator or CLV)
3. Ld : TOC Reading NG : TIME OUT Before TOC Reading completion (All SERVO Circuit)
4. Ac : ACCESS NG : TIME OUT before ACCESS completion (All SERVO Circuit)
5. co : CH OPEN NG : Non-CHUCKING Open
6. cc : CH CLOSE NG : Non-CHUCKING Close
7. rL : ROT LEFT NG : Non CCW Turning of Roulette or Non-Detection of CCW Turning of Roulette
8. rr : ROT RIGHT NG : Non CW Turning of Roulette or Non-Detection of CW Turning of Roulette
9. OP : TRAY OPEN NG : Non TRAY Open
10. CL : TRAY CLOSE NG : Non TRAY Close
11. PU : PICK UP RETURN NG : PICK-UP Non Return to the inner most.

There are two Errors in the normal operation as follows.
1. Er : INITIALIZE ERROR : Error occurred in Mechanism when it is initialized. (Error points are displayed in Heat-running Mode.)
2. rn : RAM NG : RAM for File is not initialized.

BLOCK DIAGRAM

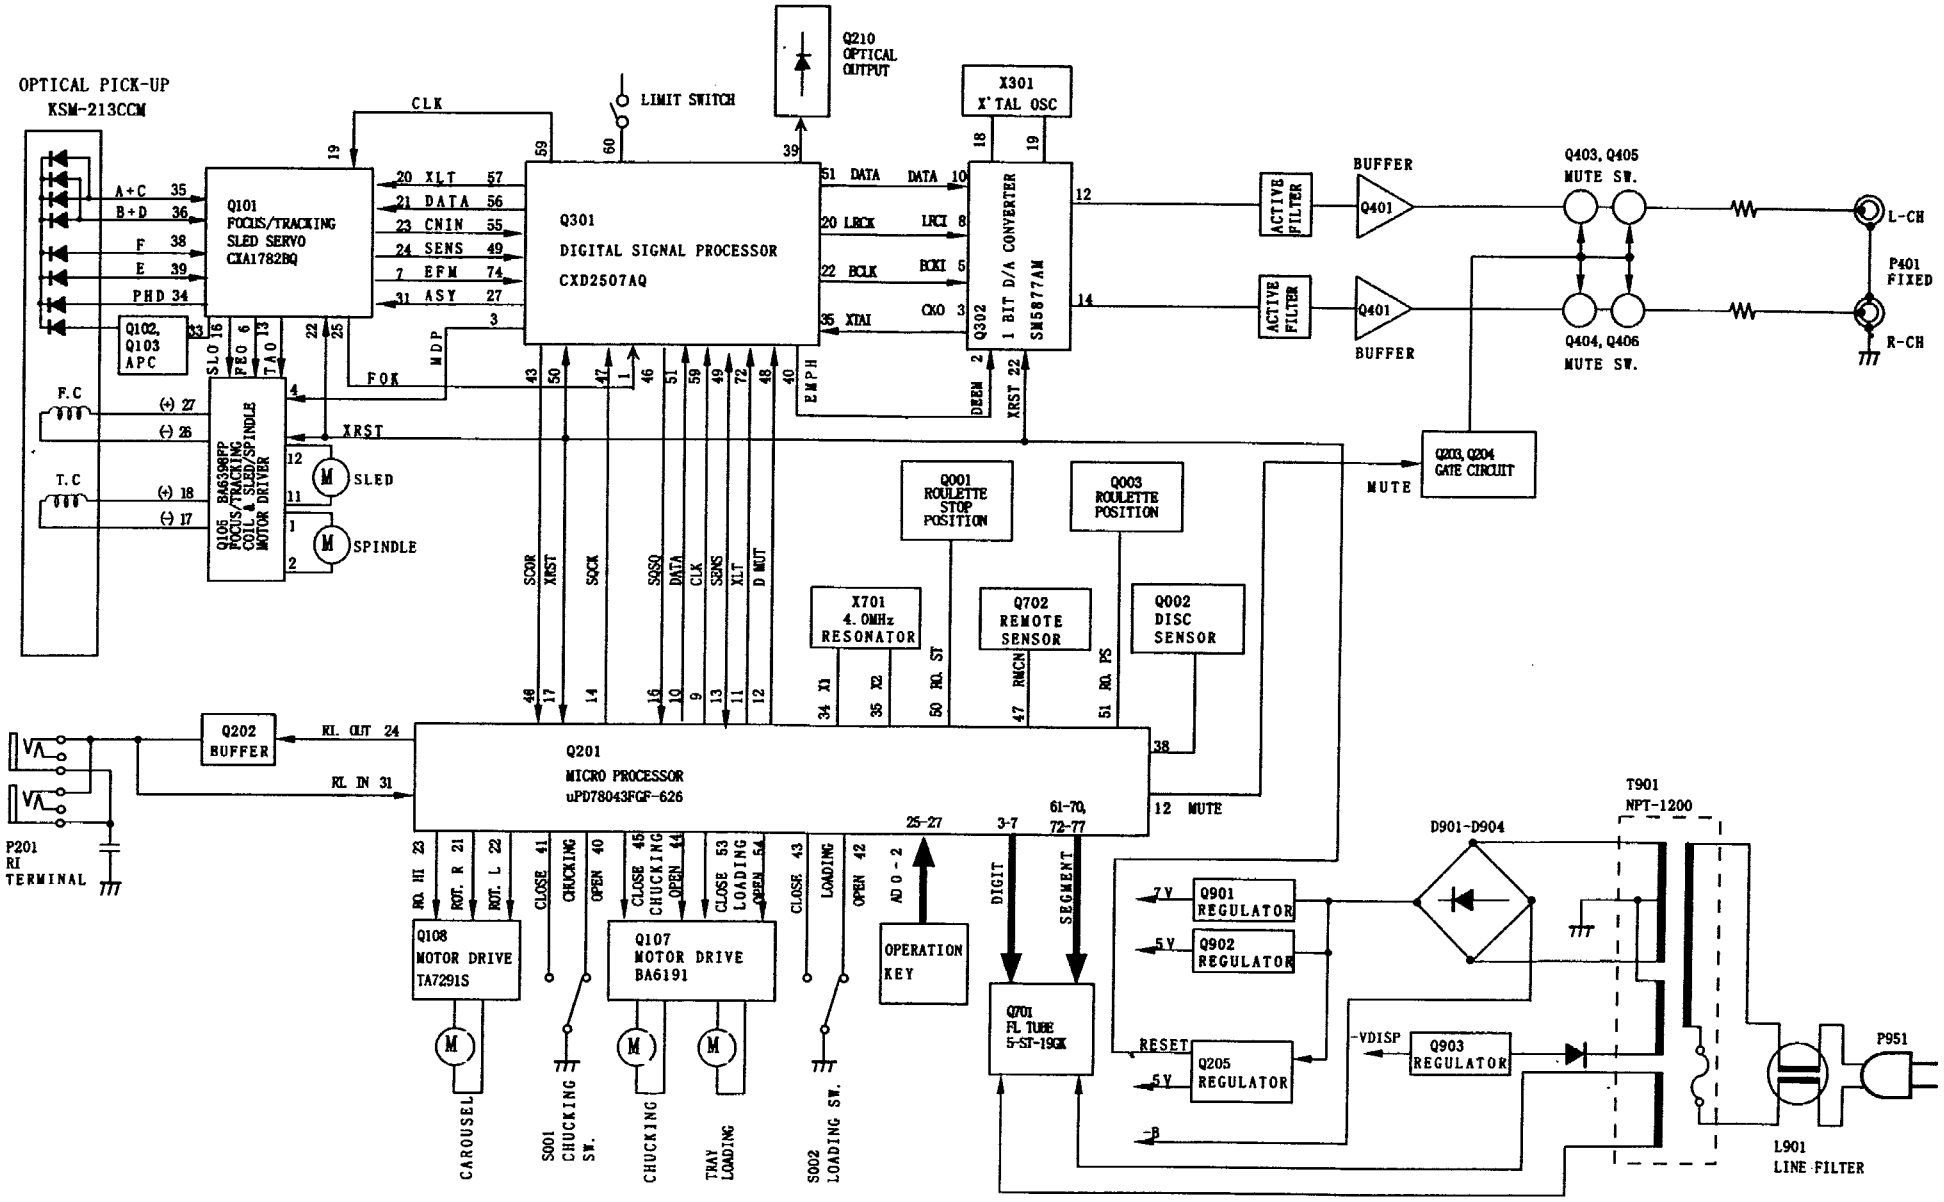

CHASSIS EXPLODED VIEW

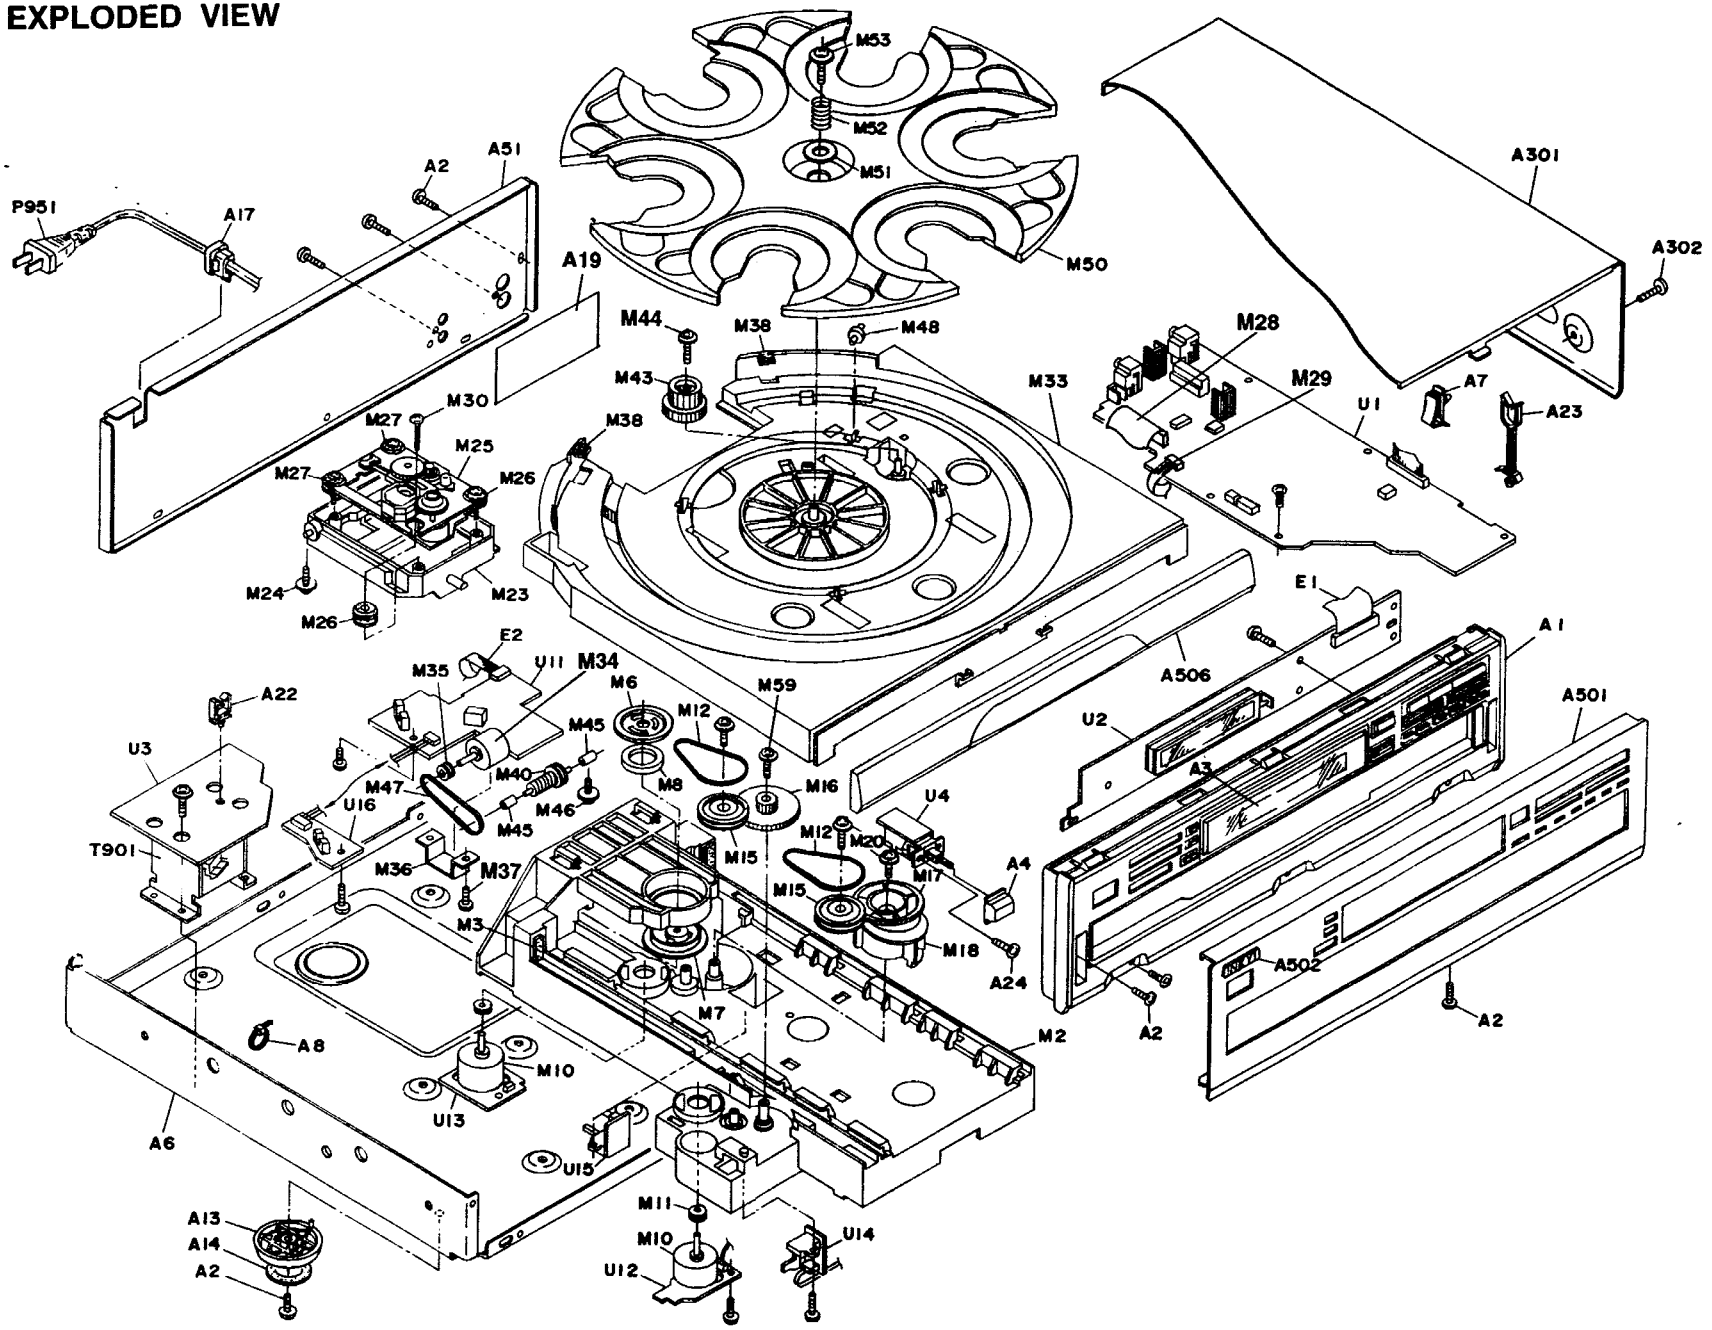

PARTS LIST

REF. NO.	PART NO.		DESCRIPTION
A1	27110990B		Front bracket <B>
	27110991B		Front bracket <S>
A2	838130088		3TTB+8B, Self-tapping screw
A3	28191776A		Clear plate <B>
	28191777A		Clear plate <S>
A4	28325465		Knob (POW) <B>
	28325466		Knob (POW) <S>
A6	27100327B		Chassis
A7	27191000		Holder,MFS-1000
A8	260208		Wire tie
A13	27175316B		Leg
A14	28141332		Cushion
A17	27300750	⚠	Cord bushing, #2271
A19	29361957		Label (ALL2)
A20	831430088		3TTW+8B(BC), Self-tapping screw
A22	27300833-2		Clamp, WS-2NS
A23	27301779		Clamp, HL-38-0
A24	838430107		3TTB+10S(BC), Self-tapping screw
A51	27122717		Rear panel <D>
	27122719		Rear panel <PA>
	27122718		Rear panel <P>
A301	28184680A		Top cover <B>
	28184681A		Top cover <S>
A302	838430088		3TTB+8B(BC) <B>
	838930088		3TTB+8B(UN) <S>
A501	27212201		Front panel <B>
	27212202		Front panel <S>
A502	28135244		Badge <B>
	28135245		Badge <S>
A506	28148365		Door <B>
	28148366		Door <S>
E1	204329005		Flexible flat cable, NCFC3-29005
E2	204307007		Flexible flat cable, NCFC3-07007
P951	253279HIT	⚠	AC cord, AS-UC-2#18 <D>
	253197HIT	⚠	AC cord, AS-SAA <PA>
	253193HIT	⚠	AC cord, AS-CEE <P>
T901	2300992	⚠	Power transformer, NPT-1200D <D>
	2300993	⚠	Power transformer, NPT-1200P <PA, P>
U1	1H442580-5		Main circuit PC board ass'y, NAAR-5880-5
U2	1H442581-5		Display circuit PC board ass'y, NADIS-5881-5
U3	1H442582-5		Power supply circuit PC board ass'y, NAPS-5882-5
U4	1H442583-5		Power switch PC board ass'y, NASW-5883-5
U11	1H401554-1		Position sensor PC board ass'y, NAETC-5854-1
U12	1H401555-1		Chucking motor PC board ass'y, NAETC-5855-1
U13	1H401556-1		Loading motor PC board ass'y, NAETC-5856-1
U14	1H401557-1		Chucking switch PC board ass'y, NAETC-5857-1
U15	1H401558-1		Roulette in/out PC board ass'y, NASW-5858-1
U16	1H401559-1		Disc sensor PC board ass'y, NAETC-5859-1

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

REF. NO.	PART NO.	DESCRIPTION
M2	24840109B	Rail
M3	28141337	Cushion
M6	24830004	Yoke (CHB)
M7	24824006	Cap (CHC)
M8	24832006	Magnet (CHB)
M10	24804015	Motor, RF-500TB-14415
M11	24810028	Pulley
M12	24816010A	Rubber belt (B)
M15	24810040	Gear (Pulley)
M16	24810039A	Gear (Load)
M17	24810041	Gear (A)
M18	24810042	Gear (B)
M20	831430088	3TTW+8B(BC), Self-tapping screw
M23	24802024	Chassis (Sub)
M24	24840111	Special self-tapping screw
M25	24800017	CD Mechanism unit, KSM-213CCM
M26	24818013	Insulator (A)
M27	24818014	Insulator (B)
M28	204416004	Flexible flat cable, NCFC4-16004
M29	2009990464	Socket AS, NASA-12P618
M30	24840111	Special self-tapping screw
M33	24840107D	Tray
M34	24804021	Motor, RF-310TA-11400
M35	24810066	Pulley (C)
M36	24822018	Retainer
M37	838130088	3TTB+8B, Self-tapping screw
M38	28141340	Cushion
M40	24810045A	Worm AS
M43	24810043	Wheel gear
M44	831430088	3TTW+8B(BC), Self-tapping screw
M45	24834017A	Spacer
M46	24840111	Special self-tapping screw
M47	24816035	Rubber belt (G)
M48	24840110	Roller
M50	24840108A	Roulette
M51	24834016	Washer (A)
M52	24820033	Spring (A)
M53	24840111	Special self-tapping screw
M58	838130088	3TTB+8B, Self-tapping screw
M59	838426088	2.6TTB+8B(BC), Self-tapping screw

NOTE: <B> Black model only
<S> Silver model only
<D> 120V model only
<P> 230V model only
<PA> Australian model only

PICK-UP DRIVE UNIT

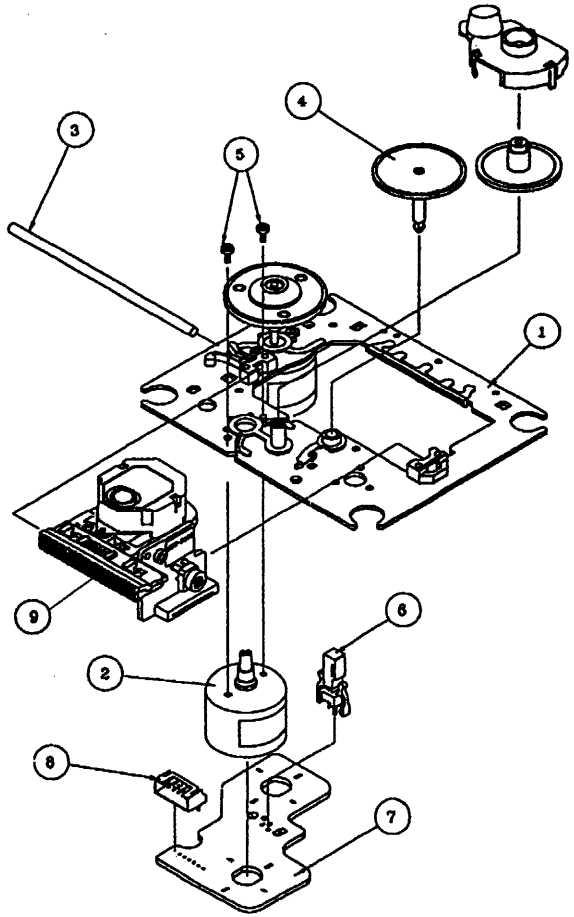

REF.NO.	PART NO.	DESCRIPTION
1	X-2625-877-1	Motor chassis ass'y
2	X2625-769-1	Motor gear ass'y
3	2626-908-01	Sled shaft
4	24810023	Gear A
5	7621-255-15	P2x3,Pan head screw
6	24840008	Leaf switch
7	1639-678-12	Motor PC board
8	1564-722-11	6P, Connector pin
9	8848-483-05	KSS-213C, Optical pickup

PRINTED CIRCUIT BOARD-PARTS LIST

Main circuit PC board (NAAR-5880-5)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q101	22241093	CXA1782BQ
Q105	22241066	BA6398FP
Q107	22240771	BA6191
Q108	22240239	TA7291S
Q201	22241094	MPD78043FGF-026
Q205	22240018	M51943A(M51943ASL)
Q301	22241096	CXD2507AQ
Q302	22241074R9	SM5877AM
Q401	222956	NJM2068D-D
Q901	222780075	78M07HF
Q902	222780055	78M05HF
	Transistors	
Q102,Q903	2211504	2SA950-Y
Q103,Q109,Q202	2212600 or 2215780	DTA124ES or KRA103M
Q106	2211255 or 2215985	2SC1815-GR or KTC3198-GR
Q110,Q203	221282 2215820 or	DTC144ES KRC104M or
Q204	2211455 or 2215975	2SA1015-GR or KTA1266-GR
Q403-Q406	2211706 or 2216002	2SD655-F or KTC2874-B
	Photo coupler	
Q210	24120038	GP1F32T
	Diodes	
D10,D201,D203, D205,D206	223205 or 223163	1SS270A or 1SS133
D102,D202,D401	224470562	MTZJ5.6B, Zener
D908	224473004	MTZJ30D, Zener
D909	224470512	MTZJ5.1B, Zener
	Capacitors	
C101,C102,C108 C126,C202,C211, C308	354721019	100 μ F, 6.3V, Elect.
C105,C109,C110 C120,C129,C138, C304,C306	374721034	0.01 μ F±5%, 50V, Plastic
C106,C112,C131	374722224	2200pF±5%, 50V, Plastic
C107	374723334	0.033 μ F±5%, 50V, Plastic
C111,C114	374724744	0.47 μ F±5%, 50V, Plastic
C113	374721024	1000pF±5%, 50V, Plastic
C115,C116,C119	374721044	0.1 μ F±5%, 50V, Plastic
C117	354780479	4.7 μ F, 50V, Elect.
C122	354763309	33 μ F, 35V, Elect.
C123	354780339	3.3 μ F, 50V, Elect.
C125,C127,C128 C135,C421,C422, C910-C912	354744709	47 μ F, 16V, Elect.
C205,C303	354784799	0.47 μ F, 50V, Elect.
C206	354782299	0.22 μ F, 50V, Elect.
C207,C913	354721029	1000 μ F, 50V, Elect.
C215,C216	354781019	100 μ F, 50V, Elect.
C301	374722234	0.022 μ F±5%, 50V, Plastic
C302	374721524	1500pF±5%, 50V, Plastic
C311-C313	354722219	220 μ F, 6.3V, Elect.
C314	354724719	470 μ F, 6.3V, Elect.
C316,C317	354741009	10 μ F, 16V, Elect.
C401,C402,C411 C412	374723924	3900pF±5%, 50V, Plastic
C403-C406, C409,C410	374721824	1800pF±5%, 50V, Plastic
C407,C408	374724714	470pF±5%, 50V, Plastic
C413,C414	374722724	2700pF±5%, 50V, Plastic
C415,C416	354781009	10 μ F, 50V, Elect.
C417-C420, C423	374722734	0.027 μ F±5%, 50V, Plastic
C916,C917	354764709	47 μ F, 35V, Elect.
	Resistors	
R108,R126	5210263	N06HR20KBC, Trim
R217	49163104405	RM1/10IJ-100K *5, R net
	Ceramic lock	
X201	3010229	EFOEC004A4
	Resonator	
X301	3010159	AT-38-169, Crystal
	Holder	
X301A	27190751	
	Choke coil	
L101	233454K100	NCH-1452 100K
	Sockets	
P101	25051768	NSCT-16P1555
P105A	25051851	NSCT-7P1638
P202A	25051836	NSCT-29P1623
	Plugs	
P102A,P104A	25055150	NPLG-6P134
P103A	25055149	NPLG-5P133
P106	25055038	NPLG-2P29
P107	25055045	NPLG-4P33
	Jacks	
P201	25045481 or 25045330	NPJ-2PDBL299 or NPJ-2PDBL184
P401	25045353	NPJ-2PDBL199, Line out
	Radiators	
Q901A,Q902A	27160145-1	RAD-51

Display circuit PC board (NADIS-5881-5)

CIRCUIT NO.	PART NO.	DESCRIPTION
	FL tube	
Q701	212132	5-ST-19GK
	Remote sensor	
Q702	24130011 or	PIC-12043TE2 or
Q702 or	241330	PIC-26043TE2
	Capacitor	
C701	353721019	100 μ F, 6.3V, Elect
	Switches	
S701-S719	25035652 or	NPS-111-S604 or
	25035652MAT or	NPS-111-S624 or
	25035704	NPS-111-S667
	Holder	
E701	27190941	(FL)
	Socket	
P202B	25051873	NSCT-29P1660

Power supply circuit PC board (NAPS-5882-5)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Diodes	
D901-D907	22380260 or	⚠ RL1N4003 or
	22380035	⚠ GP104003E

CIRCUIT NO.	PART NO.	DESCRIPTION
	Coil	
L901	231222	⚠ NCH-3454
	Capacitors	
C901	354744729S	4700 μ F, 16V,Elect
C902	393342227S	2200 μ F, 16V,Elect
C905	354784709	47 μ F, 50V,Elect
C906	354780229	2.2 μ F, 50V,Elect
C908,C909	354744719	470 μ F, 16V,Elect
	Sockets	
P901A	25050273	NSCT-9P101
P902A	25050269	NSCT-5P97
	Plug	
P903	25055676	NPLG-2P632

Power switch PC board (NASW-5883-5)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitor	
C950	3500191	⚠ DE7150F-103M , AC400V/125V , IS C
	Switch	
S901	25035636	⚠ NPS-111-L590P , Power

Position sensor PC board (NAETC-5854-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Photo interrupters	
Q001	24190041	SG-207
Q002	24190046	GP2S28
	Capacitors	
C001,C003	354744709	47 μ F, 16V, Elect
C002	352942206	22 μ F, 16V, Elect
	Sockets AS	
P001A	2002390605UL	NSAS-6P0597
P103	2009990447UL or	NSAS-10P0596 or
	2009990594UL	NSAS-10P-0807
P104	2009990446UL or	NSAS-11P0595 or
	2009990593UL	NSAS-11P-0806
	Sockets	
P105B	25051851 or	NSCT-7P1638 or
	25050913	NSCT-7P700

Chucking motor PC board (NAETC-5855-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitor	
C004	352942206S	22 μ F, 16V, Elect

Chucking switch PC board (NAETC-5857-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Switch	
S001	25065491	NMS-1223

Roulette in/out PC board (NASW-5858-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Switch	
S002	25065375	NMS-1219

Disc sensor PC board (NAETC-5859-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Photo interrupter	
Q003	24190041	SG-207
	Plug	
P001B	25055367	NPLG-3P350

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

SCHEMATIC DIAGRAM

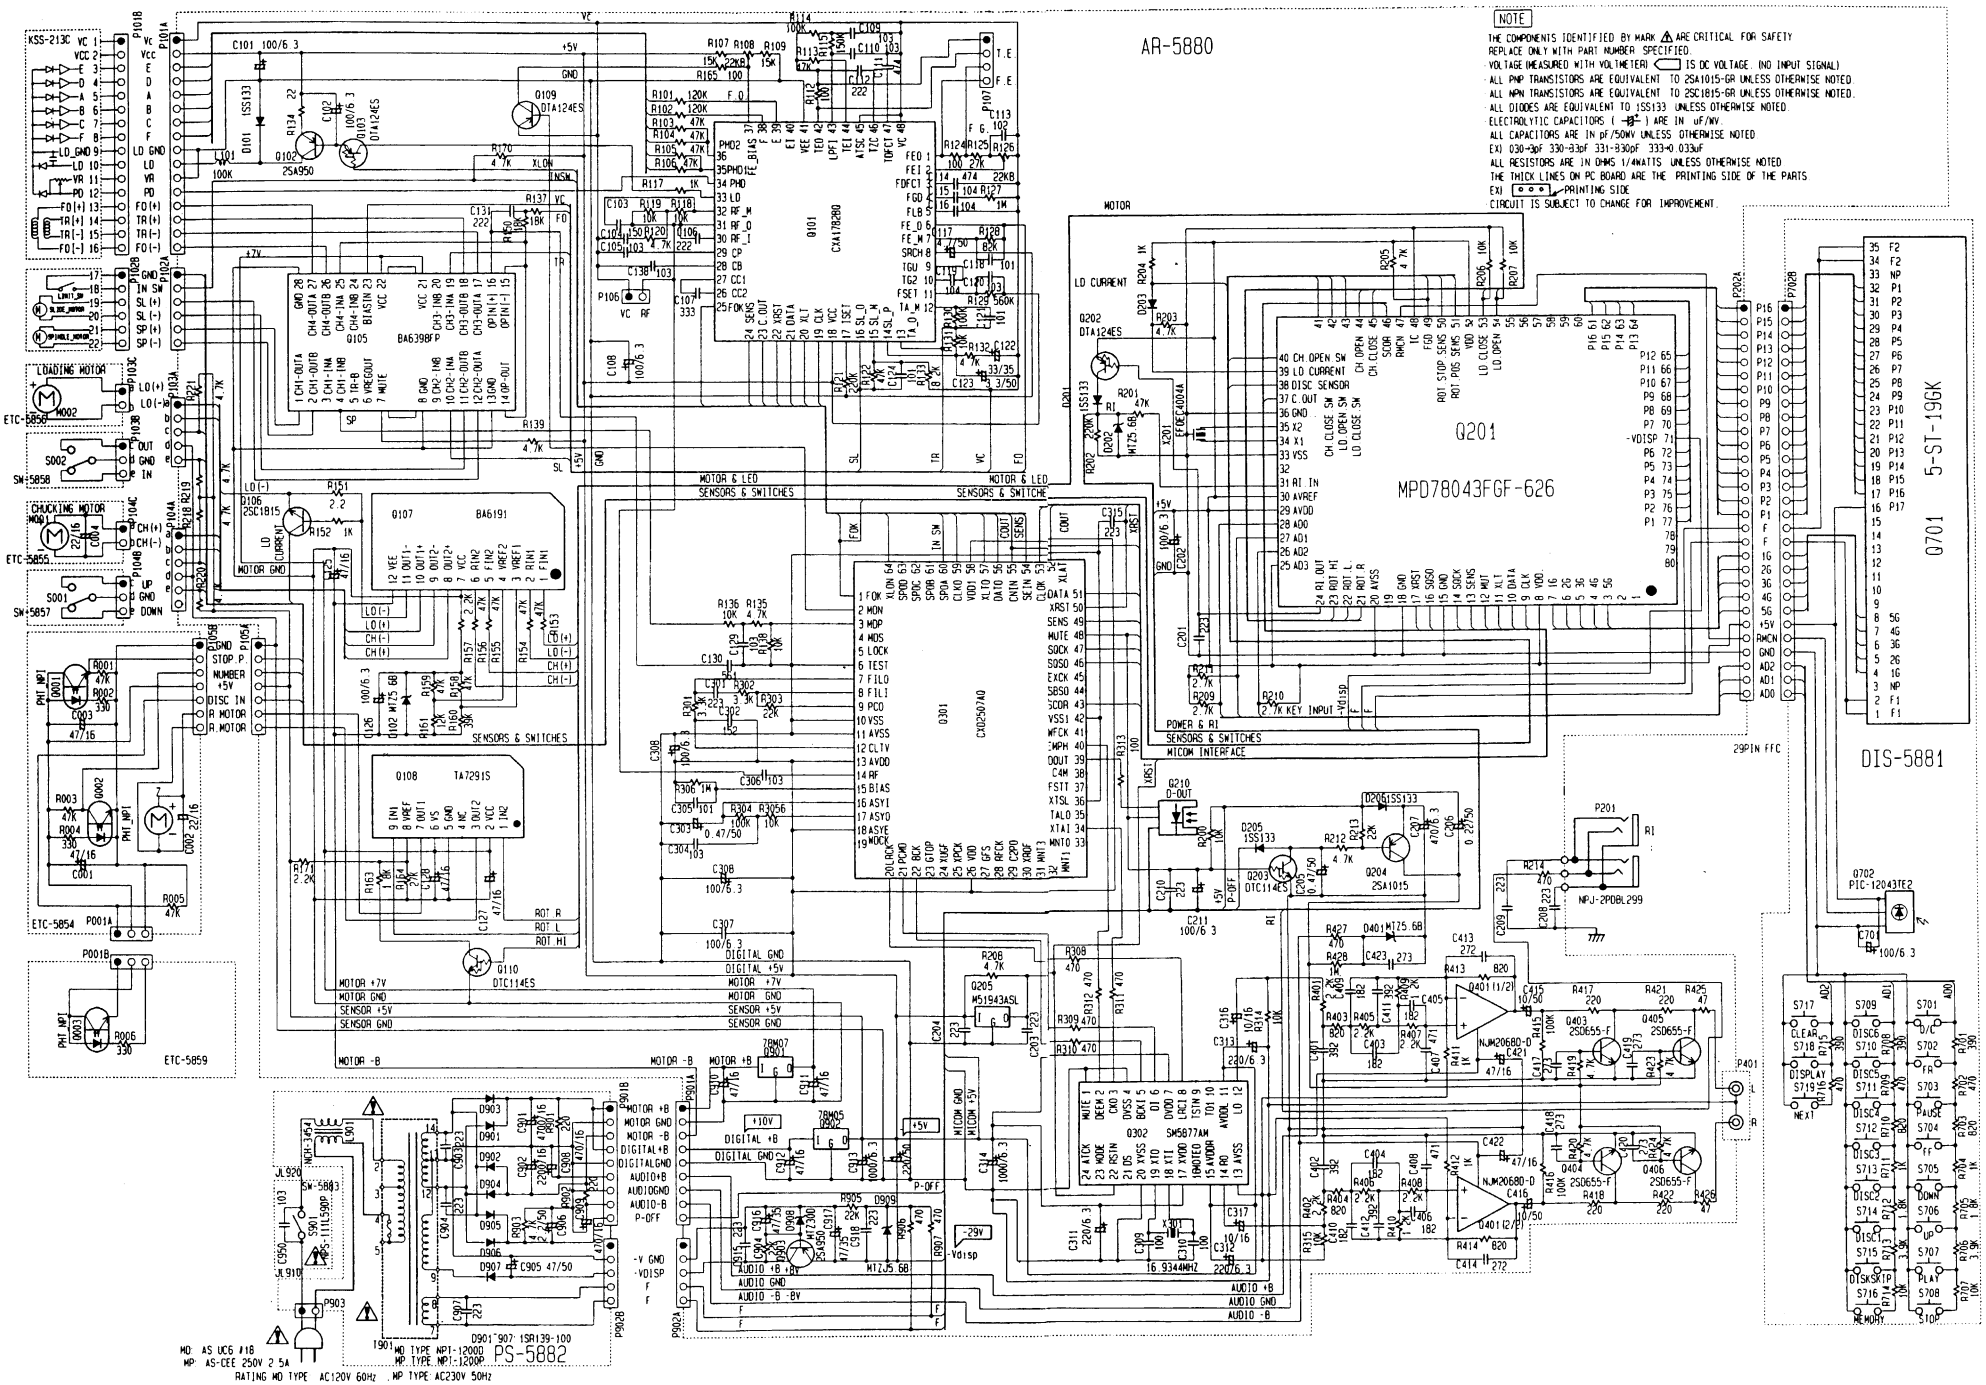

ADJUSTMENT PROCEDURES

Instruments required

Dual trace oscilloscope, AF oscillator, Test disc (SONY YEDS-18) and AC voltmeter.

1. Focus offset adjustment

Turn R108 and R126 to the mechanical center.
Load the test disc YEDS-18 on the tray and play the track 2.
Connect the oscilloscope to terminal P106.
Adjust R108 until the waveform on the oscilloscope becomes maximum.
After adjustment, disconnect the oscilloscope.

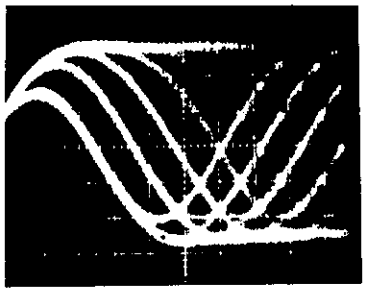

Photo 1

0.2V/div
0.2μs/div

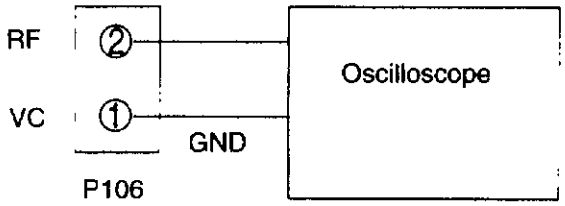

2. Focus gain adjustment

Set the output of AF oscillator to 1kHz, 2 Vp-p.
Play the track 2 of test disc.
Connect the oscilloscope and the AF oscillator as shown below.

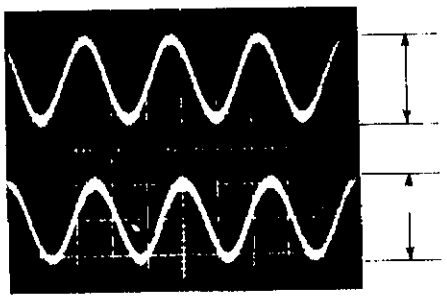

0.5V/div
0.5ms/div

Photo 2

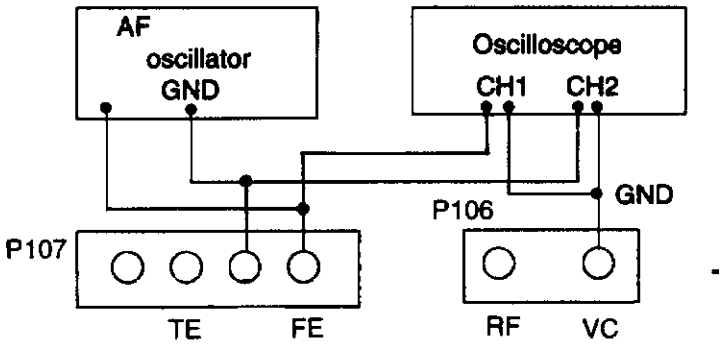

Adjust R126 until 1kHz components of channels 1and 2 on oscilloscope become same level.
After adjustment, disconnect the AF oscillator and the oscilloscope.

PACKING VIEW

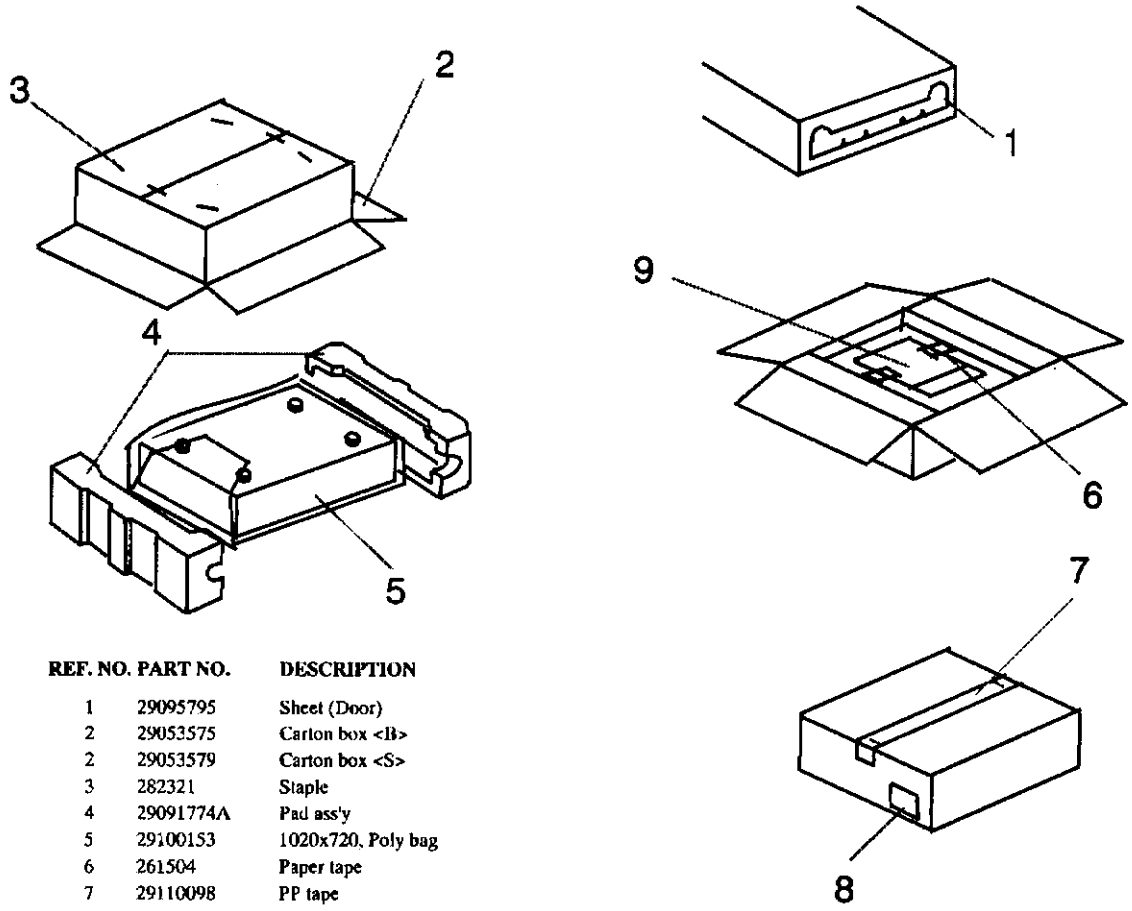

REF. NO.	PART NO.	DESCRIPTION
1	29095795	Sheet (Door)
2	29053575	Carton box <B>
2	29053579	Carton box <S>
3	282321	Staple
4	29091774A	Pad ass'y
5	29100153	1020x720, Poly bag
6	261504	Paper tape
7	29110098	PP tape
8	29362614	Label, UPC <D>
8	29362618	Label, EAN <B> <PA,P>
8	29362619	Label, EAN <S> <P>
9	**Accessory bag ass'y**	
	2010381 or	Audio connection cable
	2010326	
	2010200	RI cable
	24140331B	RC-331C, Remote control
	29100097-1A	350*250, Poly bag
	29342883	Instruction manual, E
	29342927	Instruction manual, U3GSWD <P>
	29342928	Instruction manual, U3FSI <P>
	29355299	Instruction sheet <D>
	29365083A	Warranty card <D>
	29365042	Warranty card <PA>
	29360840	Label sheet <D>
	3010054	Battery, UM3
	27270397	Spacer, Chassis
	29095866	Sheet, ONKYO <D>

NOTE: <B> Black model only
<S> Silver model only
<D> 120V model only
<P> 230V model only
<PA> Australian model only

ONKYO CORPORATION

Sales & Product Planning Div.:2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN
Tel: 072-831-8111 Fax: 072-833-5222
ONKYO U.S.A. CORPORATION
200 Williams Drive, Ramsey, N.J. 07446, U.S.A.
Tel: 201-825-7950 Fax: 201-825-8150 E-mail: onkyo@onkyousa.com
ONKYO EUROPE ELECTRONICS GmbH
Industriestrasse 20, 82110 Germering, GERMANY
Tel: 089 84 93 20 Fax: 089 84 93 226 E-mail: info@onkyo.de
ONKYO CHINA LIMITED
Units 2102-7, Metroplaza Tower I, 223 Hing Fong Road, Kwai Chung,
N.T., HONG KONG Tel: 852 2429 3118 Fax: 852 2428 9039

ONKYO HOMEPAGE
http://www.onkyo.co.jp/

SN 0M3649 N004 Printed in Japan